

*Natural • Minimalist*



**SKINIMALIST.**  
CONCEPT

INGREDIENTS FOR  
MULTI-PURPOSE COSMETICS




**PROD'HYG**  
*we personally care*



# *Skinimalist presentation.*

This "skinimalist" booklet is inspired by the "Minimalist" way of life :  
it involves only simple, natural and minimal elements.  
The multi-purpose cosmetic products perfectly illustrate this mindset.

Please discover in the following pages three multi-purpose  
cosmetic formulas created with the high quality Prod'Hyg  
ingredients listed below. 

# SKINIMALIST INGREDIENTS LIST:



Commercial name	INCI name	COSMOS Certified*	COSMOS Approved*	% Naturality (As per ISO16128 standard)	Function	Page
Organic carnauba wax	COPERNICIA CERIFERA CERA	✓		100%	Consistency agent	5
Prodhycire® NAT MB	GLYCERYL STEARATE, SODIUM STEAROYL LACTYLATE		✓	100%	Consistency and texturizing agent	5
Hydrobase® 32/34	HYDROGENATED COCONUT OIL		✓	100%	Texturizing agent	5
Hydrobase® 67/71	HYDROGENATED JOJOBA OIL		✓	100%	Texturizing agent	3
Mirabelle plum oil	PRUNUS DOMESTICA SEED OIL			100%	Emollient	5
Organic olive oil	OLEA EUROPAEA FRUIT OIL	✓		100%	Emollient	3
Organic camelina oil	CAMELINA SATIVA SEED OIL	✓		100%	Emollient	3
Organic hemp oil	CANNABIS SATIVA SEED OIL	✓		100%	Emollient	1
Lactabase® C14 MB	MYRISTYL LACTATE		✓	100%	Texturizing agent - Emollient	1-3
Prodhycire® EAG Calendula	CALENDULA OFFICINALIS FLOWER EXTRACT, GLYCERIN, CITRIC ACID, SODIUM BENZOATE, POTASSIUM SORBATE	✓		99,6%	Vegetal extract	3
Prodhycire® EGW Ortie piquante FR PF	GLYCERIN, URTICA DIOICA LEAF EXTRACT	✓		100%	Vegetal extract	1
Frigydil®	MENTHYL LACTATE			25%	Sensory agent	1

(\*) : certified by Ecocert Greenlife according to Cosmos standard available at <http://COSMOS.ecocert.com>

(\*\*) : approved by Ecocert Greenlife, according to COSMOS standard available at <http://COSMOS.ecocert.com>



# 3 MULTI-PURPOSE FORMULAS WITH PROD'HYG INGREDIENTS

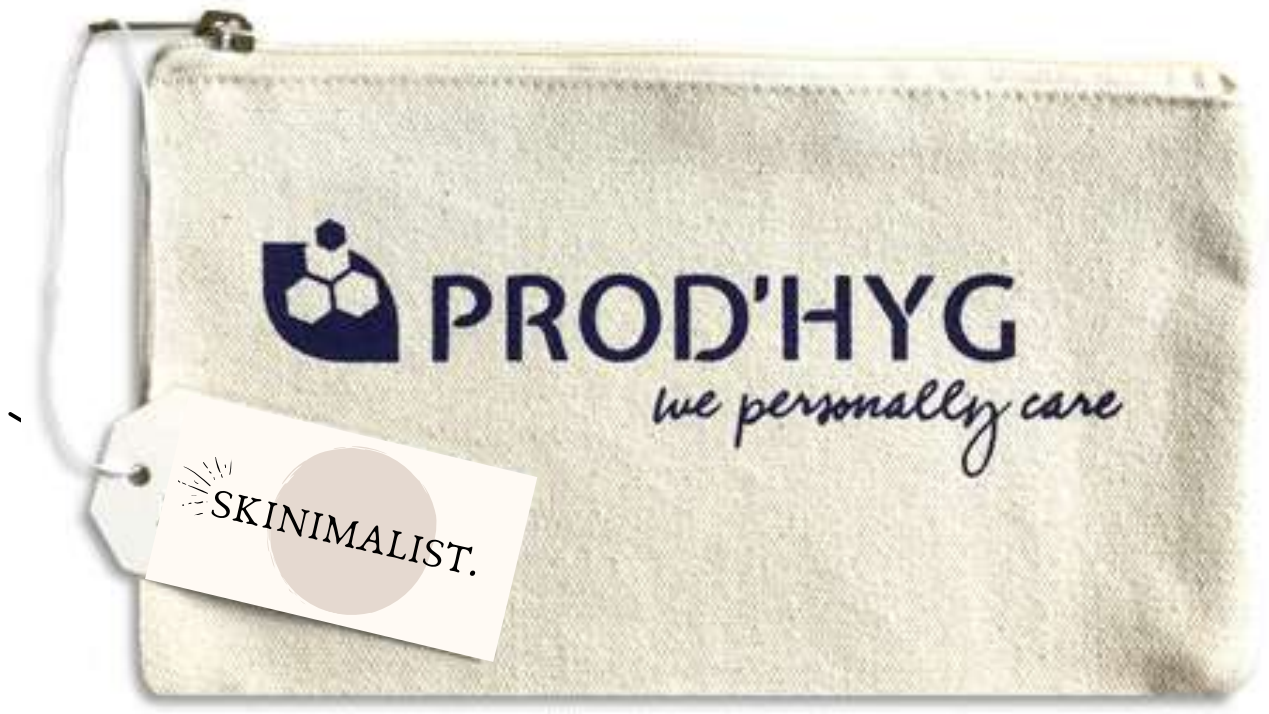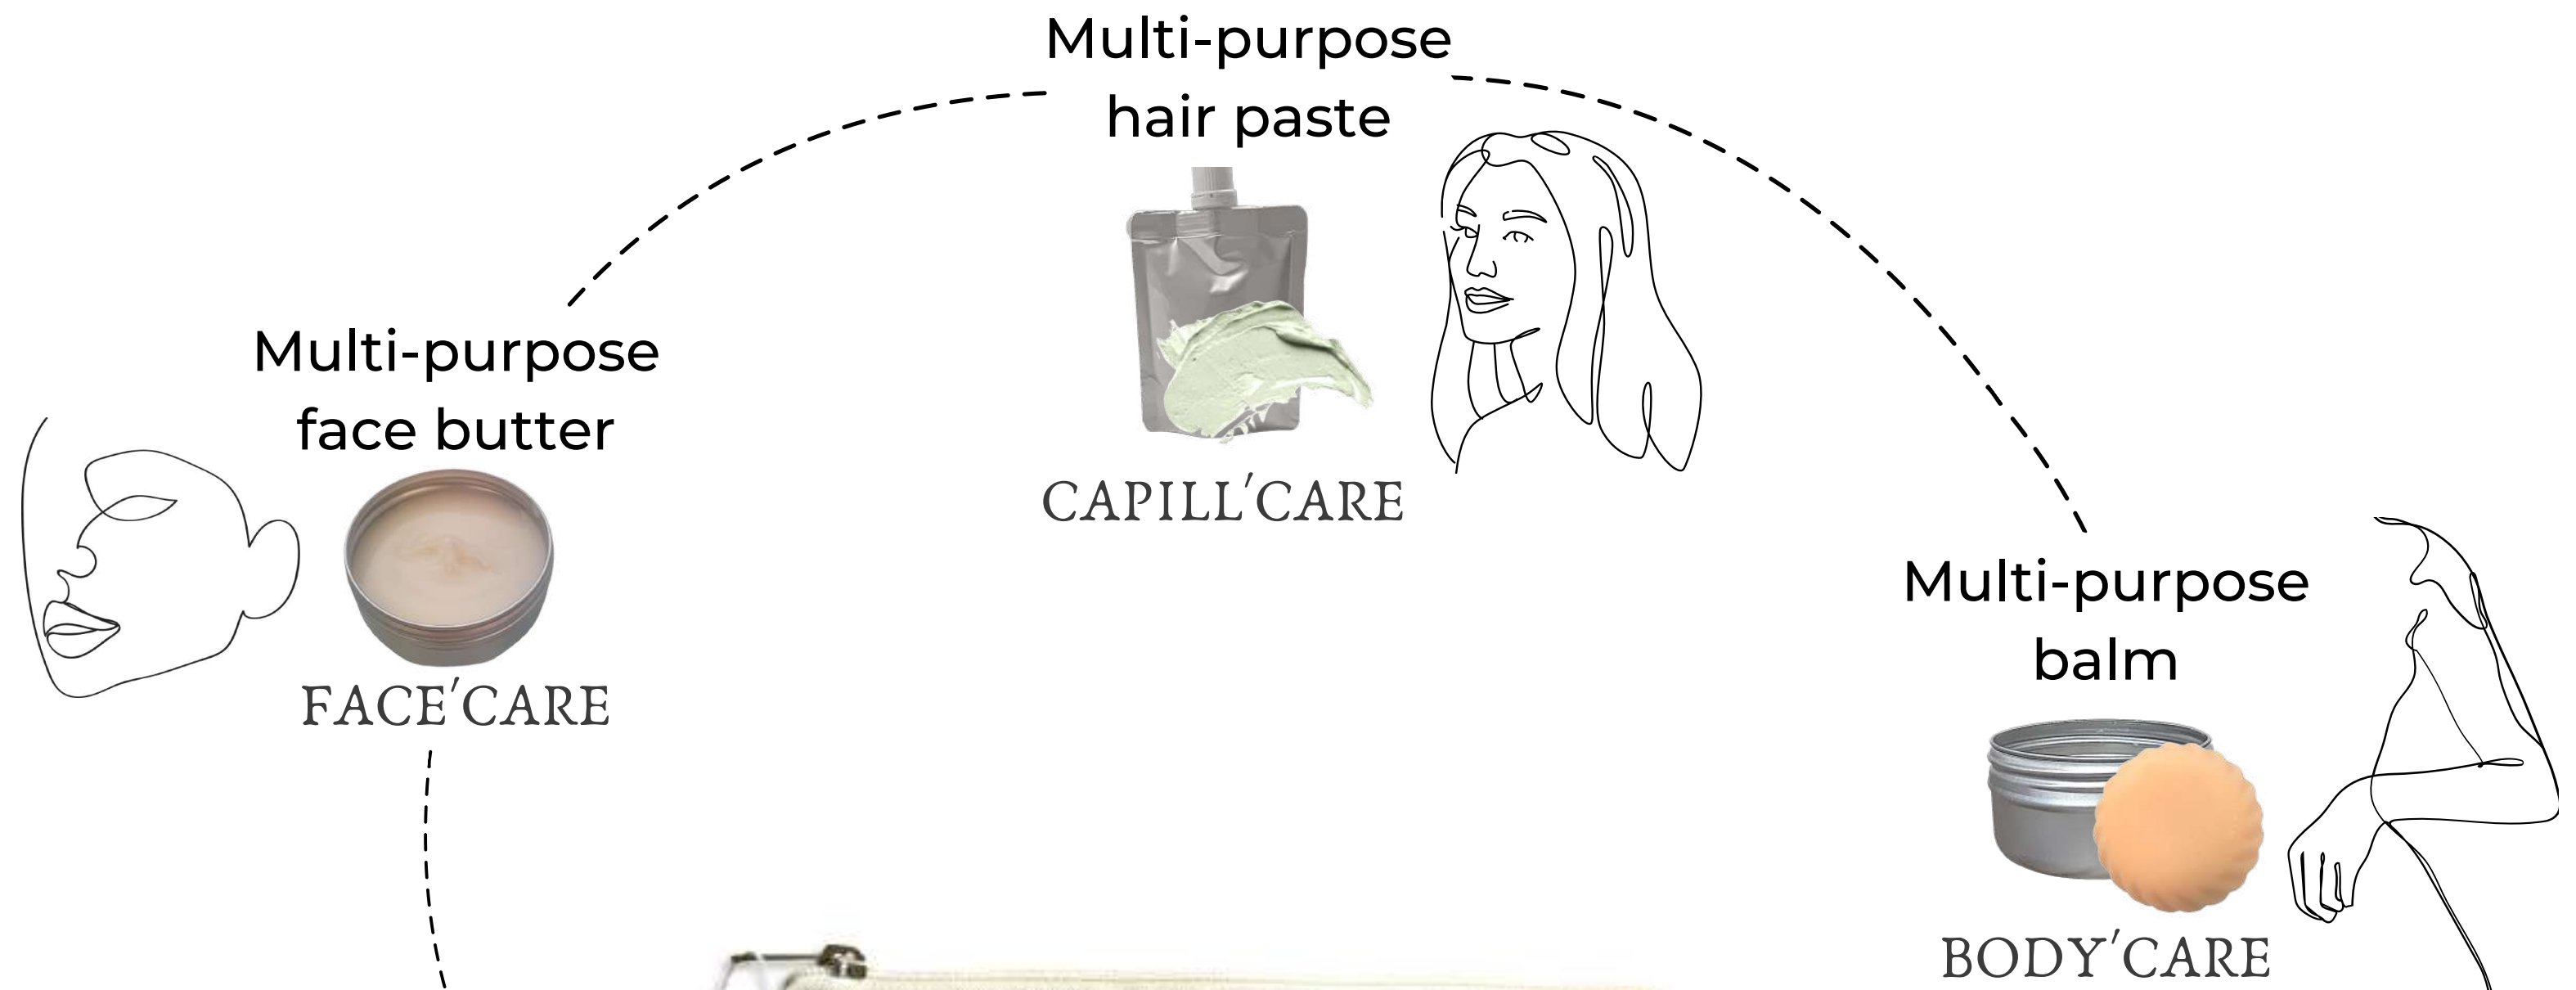

# TABLE OF CONTENTS :



 Capill'care

p.1

 Face'care

p.3

 Body'care


p.5

Notes

p.8

— *Natural | Multi-purpose | Minimalist* —



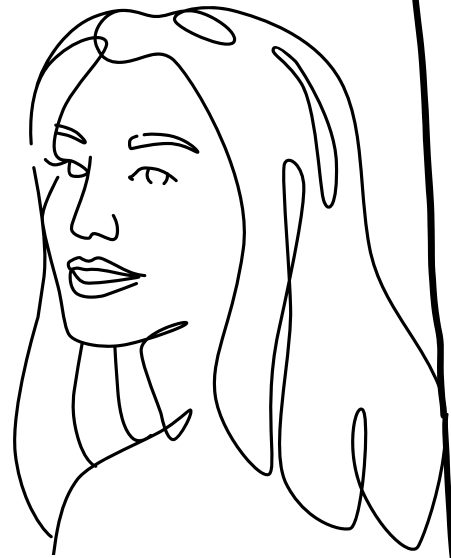

# CAPILL' CARE

Cleansing ● Nourishing ● Conditioning



Prodhybio® EGW Ortie piquante FR PF :



Combines purifying and fortifying action of the hair



Lactabase® C14 MB :



Brings softness and shine thanks to unique melting texture



Organic hemp oil France :



Ideal for the hair, this oil is soothing and regenerating




Frigydil® :

Brings a fresh effect and a mentholate smelled



# INGREDIENTS LIST :

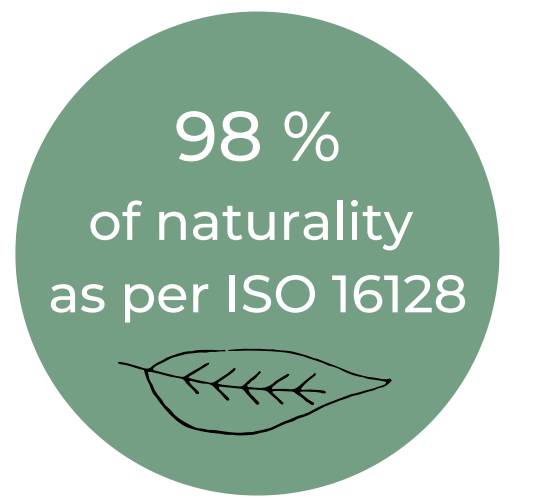

Phase	Commercial name	INCI name	Function	%	
A	A1	Prodhygel® XT	XANTHAN GUM	Gelling agent	0,15
		Organic glycerin	GLYCERIN	Excipient	35,95
	A2	HOSTAPON® CLG	SODIUM LAUROYL GLUTAMATE, AQUA (WATER), PROPYLENE GLYCOL	Foaming surfactant - detergent	33,00
B		Prodhycire® CAP	CETYL ALCOHOL, OLEYL ALCOHOL, STEARYL ALCOHOL, STEARIC ACID, PALMITIC ACID	Emulsifier	7,50
		Lactabase® C14 MB	MYRISTYL LACTATE	Conditioner	2,00
		Organic hemp oil	CANNABIS SATIVA SEED OIL	Emollient	3,00
		Tocopherol	TOCOPHEROL	Antioxidant	0,15
C		Organic glycerin	GLYCERIN	Humectant	6,00
		PUREACT I-78 P	SODIUM COCOYL ISETHIONATE, COCONUT ACID, SODIUM ISETHIONATE, AQUA (WATER)	Foaming surfactant - detergent	2,50
D		Organic glycerin	GLYCERIN	Humectant	5,00
		Green clay RS	ILLITE, KAOLIN, MONTMORILLONITE	Purifying agent	2,50
E		Prodhylbio® EGW Ortie piquante FR PF	GLYCERIN, URTICA DIOICA LEAF EXTRACT	Vegetal extract	0,50
F		Prodhylseptine® PCD	PHENOXYETHANOL, DECYLENE GLYCOL, CAPRYLYL GLYCOL	Preservative	0,75
G		Frigydil®	MENTHYL LACTATE	Sensory agent	1,00
H		Citric acid 50% in water	CITRIC ACID, AQUA (WATER)	pH adjuster	QS

Process :

- Weigh phase A1
- Disperse Prodhygel® XT into glycerin
- Once phase A1 is homogeneous, add phase A2 slowly
- Heat at 75°C
- Weigh phase B and heat at 75°C
- When A and B are at the same temperature, emulsify
- Cool down to 35°C
- Prepare Phase C : disperse Pureact I78-P into glycerin
- Add phase C under stirring
- Disperse green clay into glycerin and add to mixture at T<35°C
- Add phase E, then phases F and G
- Adjust pH between 5 and 5.25

Viscosity : 100 à 110.10<sup>4</sup> cP (DV-M64 - Vit 0,5 rpm)

Application :





Rince off



*multi-purpose face butter*


# FACE' CARE

Cleansing ● Makeup removing ● Soothing

- Prodhybio® EAG Calendula :   
Brings soothing properties
- Hydrobase® 67/71 :   
Combines a melting and creamy sensation
- Organic camelina oil France :   
Provides softness and radiance to the skin
- Organic olive oil France :   
Ideal for the skin, this oil is nourishing, repairing and soothing



# INGREDIENTS LIST :

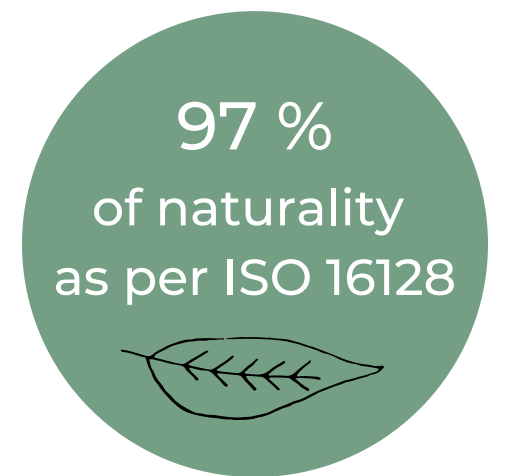

Phase	Commercial name	INCI name	Function	%	
A	A1	Dermofeel PA12	SODIUM PHYTATE	Chelating agent	0,05
		Water	AQUA (WATER)	Excipient	25,85
	A2	Prodhygel® XT	XANTHAN GUM	Gelling agent	0,10
		Organic glycerin	GLYCERIN	Humectant	30,00
B	Prodhybase® GLN P MB	GLYCERIL STEARATE SE	Emulsifier	12,00	
	Hydrobase® 67/71	HYDROGENATED JOJOBA OIL	Texturizing agent	4,00	
	Lactabase® C14 MB	MYRISTYL LACTATE	Texturizing agent - Emollient	5,00	
	Organic olive oil	OLEA EUROPAEA FRUIT OIL	Emollient	17,00	
	Organic camelina oil	CAMELINA SATIVA SEED OIL	Emollient	2,50	
	Tocopherol	TOCOPHEROL	Antioxidant	0,20	
C	Plantacare 810 UP	CAPRYLYL / CAPRYL GLUCOSIDE, AQUA (WATER)	Non-ionic surfactant	1,00	
D	Prodhybio® EAG Calendula	CALENDULA OFFICINALIS FLOWER EXTRACT, GLYCERIN, CITRIC ACID, SODIUM BENZOATE, POTASSIUM SORBATE	Vegetal extract	1,00	
E	Geogard 221	DEHYDROACETIC ACID, BENZYL ALCOHOL	Preservative	1,15	
F	Parfum	PARFUM	Perfume	0,15	
G	Citric acid 50% in water	CITRIC ACID, AQUA (WATER)	pH adjuster	QS	

## Process :

- Weigh the chelating agent and dissolve it in water under stirring
- Disperse Prodhygel® XT into glycerin
- Add phase A2 into phase A1 under moderate stirring until having a homogeneous phase
- Heat phase A at 75°C
- Weigh phase B and heat at 75°C
- When both phases are at the same temperature, pour phase B into phase A
- Emulsify for at least 10 minutes. At T<50°C, cool with a cold water bath
- At T<35°C, add phase C and then phases D, E and F
- Adjust pH between 5,5 and 6,5

Viscosity : 500 à 800.10<sup>3</sup> cP (DV-M64 - Vit 0,5 rpm)

## Application :

Rince off (face mask/cleansing butter)

# BODY' CARE

Nourishing ● Protecting ● Repairing



Prodhycire® NAT MB :



Contributes to stability and ensures a creamy and smooth application



Hydrobase® 32/34 :



Gives a smooth and creamy feel to the formula



Mirabelle plum oil France :

Ideal for the skin, this oil is protective and softening



Organic carnauba wax :



Provides stability and rigidity with high film forming properties

# INGREDIENTS LIST :

Phase	Commercial name	INCI name	Function	%
A	Organic carnauba wax	COPERNICIA CERIFERA CERA	Consistency agent	25,00
	Prodhycire® NAT MB	GLYCERYL STEARATE, SODIUM STEAROYL LACTYLATE	Consistency and texturizing agent	5,00
	Hydrobase® 32/34	HYDROGENATED COCONUT OIL	Texturizing agent	29,75
	Orange peel wax	CITRUS AURANTIUM DULCIS PEEL CERA	Texturizing agent	2,00
	Organic sunflower oil	HELIANTHUS ANNUUS SEED OIL	Emollient	33,90
	Mirabelle plum oil	PRUNUS DOMESTICA SEED OIL	Emollient	4,00
	Tocopherol	TOCOPHEROL	Antioxidant	0,15
B	Parfum	PARFUM	Perfume	0,20

100 %  
of naturality  
as per ISO 16128



### Process :

- Weigh phase A in the order listed and heat at 90°C
- Start stirring when the mixture begins to melt
- At 90°C and if the mixture is completely melted, cool down to 85°C
- At 85°C, add phase B and homogenize
- Pour the mixture into the packaging
- Freeze for at least 10h at 4°C

Dropping point : 78 < T°C < 80

### Application :

Leave on





**PROD'HYG**

*we personally care*


BODY'CARE



FACE'CARE



CAPILL'CARE

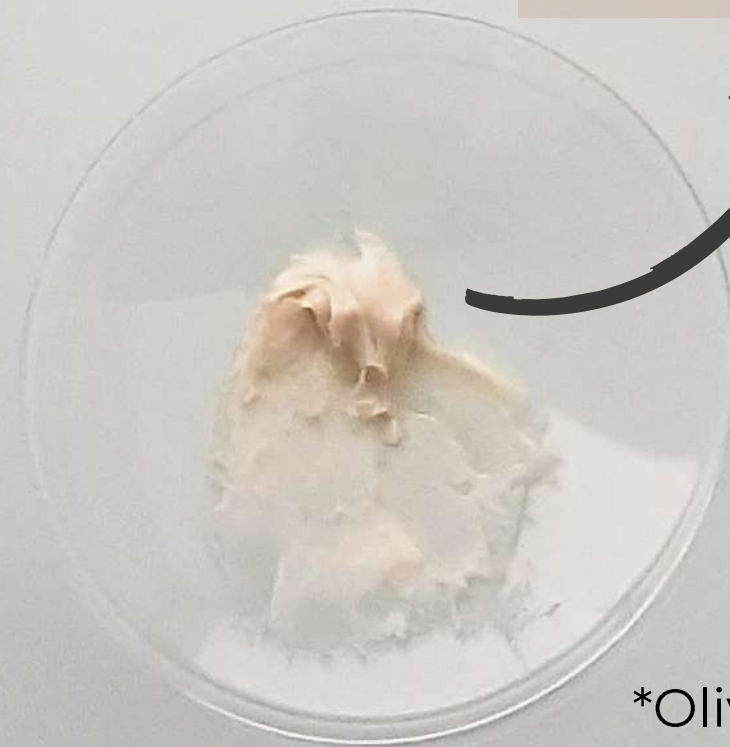

SKINIMALIST.

\*Olive leaf, carnauba wax, calendula flower, hemp, nettle leaf, mirabelle oil



# Notes

---

---

---

---

---

---

---

---

---

---

---

---

# Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---



# Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

For any further information,  
please contact our sales team:

FRANCE – [adv@prodhyg.com](mailto:adv@prodhyg.com)  
EXPORT – [prodhyg@prodhyg.com](mailto:prodhyg@prodhyg.com)



# PROD'HYG

*we personally care*

Laboratoires Prod'Hyg  
ZAC de la prévôté – 6 route de Bû – 78550 Houdan France  
Tel : +33 (0)1 30 46 89 89  
[www.prodhyg.com](http://www.prodhyg.com)

**For experimental use only :**

Formulas and samples are intended for concept presentation only and shall not be used as such for finished products business.

Efficiency claims of this concept are based on our internal research and bibliographic data only.

Users of the formulas and samples must check the conformity with their local cosmetic regulations.

